


Wiring diagram for Fischbach disk rotor motors

0.11-1 I.


Motors: E1, E15, E25, E35, E65, E80

1x 230V 50Hz/60Hz

Series: D/DS/CE-,CFE-,HD/HE-,FLR-left/AW/CEK-,HEK-right

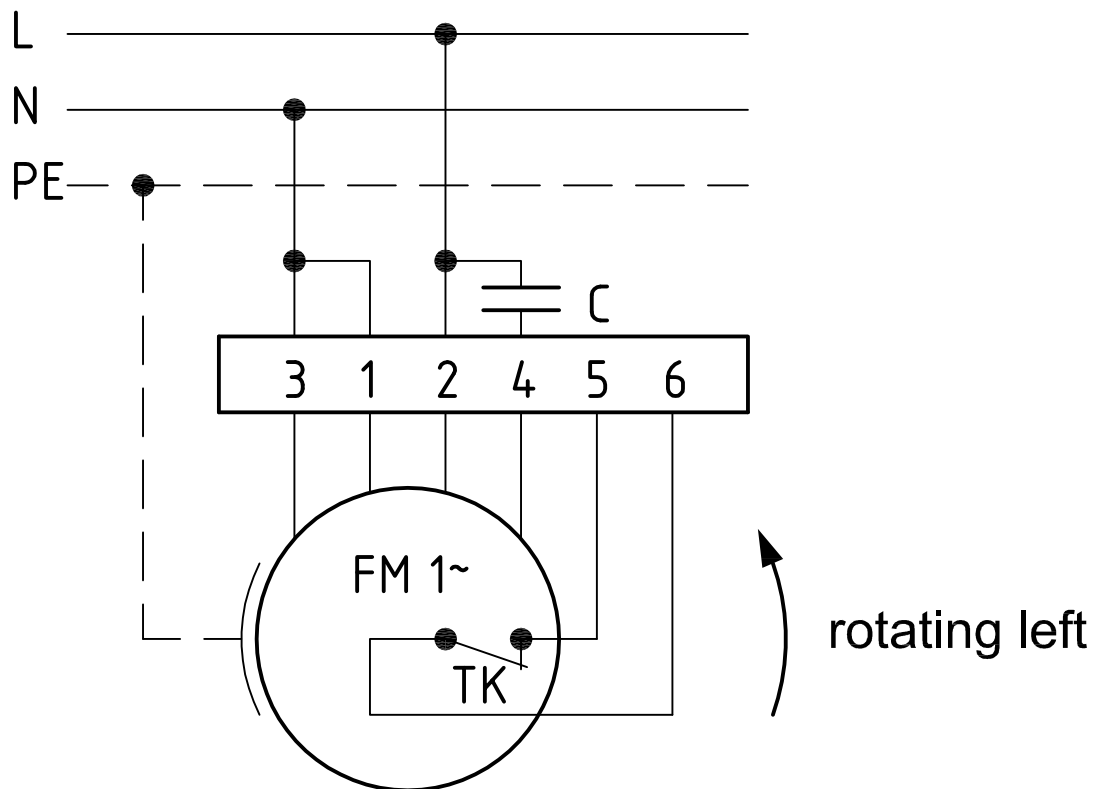


inlet side with spiral casing

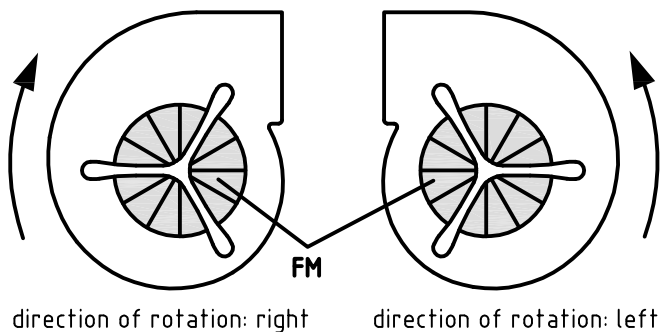

direction of rotation: right

direction of rotation: left

inlet side without spiral casing

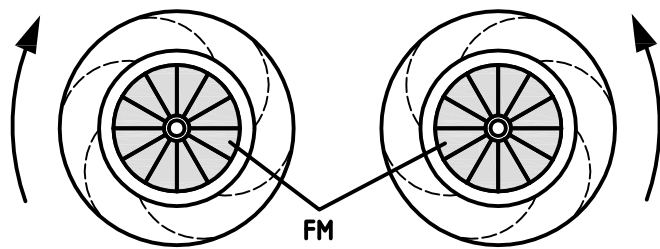

direction of rotation: right

direction of rotation: left

TK = Thermal contact (max. 2A)
FM = Fischbach disk rotor motor

Important!

To check the direction of rotation, look at the arrow on the casing. To change the direction of rotation, switch 3 and 4 on a single phase device or switch 1 and 2 on a three phase device.