
Wiring diagram for Fischbach disk rotor motors

0.13-2 r.

Motors: D015, D025, D500, D850, D1, D2, D2,5, D5


3x 400V 50Hz/60Hz

Series: CE-,CFE-,HE-,FLR-right/A/CEK-,HEK-left

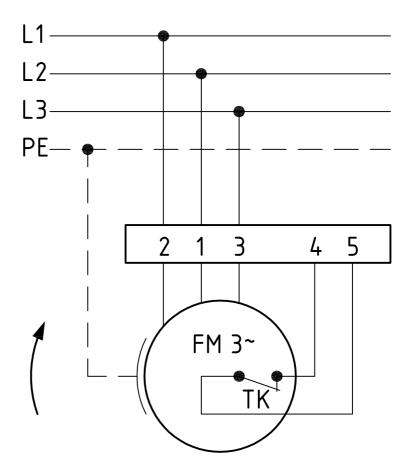

rotating right


inlet side with spiral casing

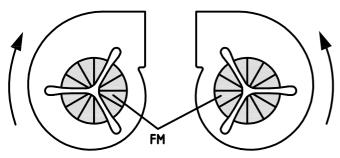

direction of rotation: right

direction of rotation: left

inlet side without spiral casing

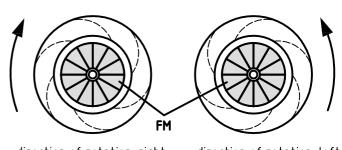

direction of rotation: right

direction of rotation: left

TK = Thermal contact (max. 2A) FM = Fischbach disk rotor motor

Important!

To check the direction of rotation, look at the arrow on the casing. To change the direction of rotation, switch 3 and 4 on a single phase device or switch 1 and 2 on a three phase device.